



MICROPHONE ADJUSTMENTS

PANEL MICROPHONE ADJUSTMENT
changes the volume you hear at the terminal

TERMINAL MICROPHONE ADJUSTMENT
changes the volume you hear at the panel

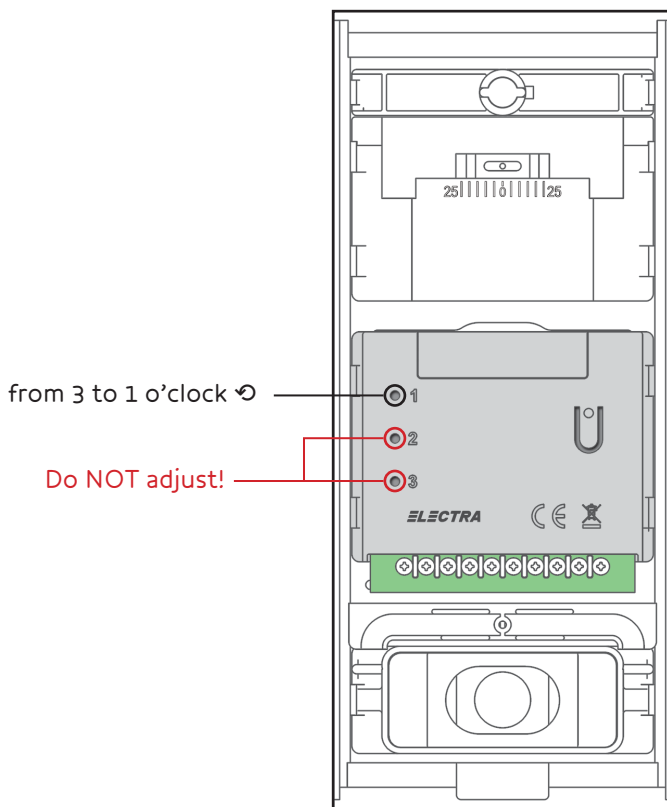

OUTDOOR PANEL

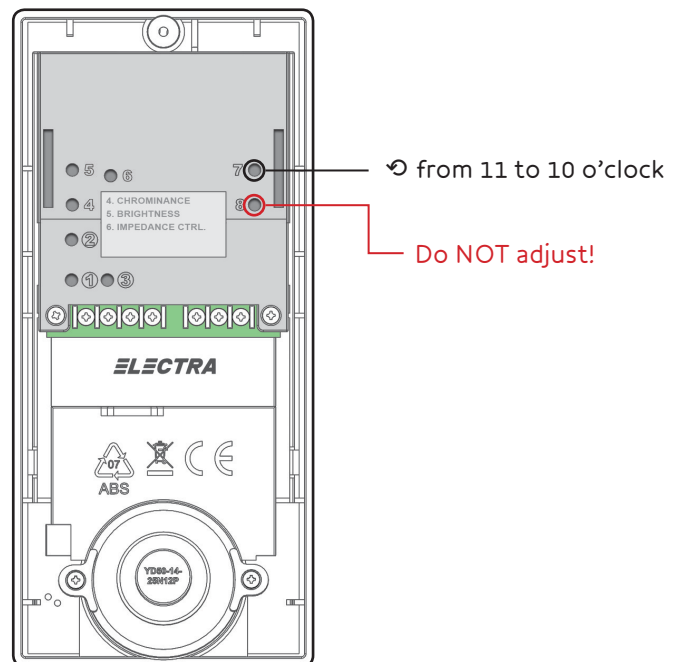

INDOOR TERMINAL